

INSTALLATION GUIDE



Audi A6 C5 4B Allroad Coil Spring Conversion Kit **ELECTRONIC BYPASS MODULE INSTALLATION**



ELECTRONIC BYPASS MODULE INSTALLATION

1. Remove the door cover located on the left side of the cargo area to expose the vehicles air suspension wiring harness and control module. (FIGURE A)



Figure A

2. Remove both plugs located on the control module. (FIGURE B)



Figure B

3. Remove the cover of the larger plug by sliding it off of the end. (FIGURE C)



Figure C



ELECTRONIC BYPASS MODULE INSTALLATION

4. Locate the following wires in the chart below from the vehicle's wiring harness.

ELECTRONIC BYPASS MODULE	FROM	PIN	VEHICLE'S WIRING HARNESS
	BLUE	20	
	GREEN	21	
	RED	25	
	BLACK	1	

5. Separate the located wires and cut, leaving a suitable length to work with. (FIGURE D)



Figure D

6. Strip the ends of the wires. Using the supplied butt connectors, crimp the electronic bypass module to the vehicle side of the wiring harness. (FIGURE E)



Figure E

ELECTRONIC BYPASS MODULE INSTALLATION

7. Connect the new plug to the electronic bypass module and secure it in a suitable location. (FIGURES F, G)

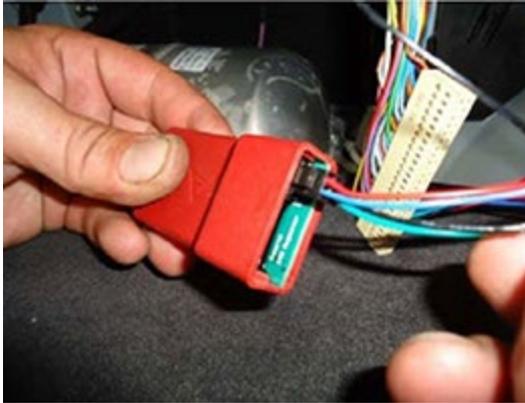


Figure F



Figure G

8. Do NOT plug wiring harness back into the vehicles air suspension control module. Replace the door cover. (FIGURE H)



Figure H

9. Installation complete.

